



Watch your shows wherever you are, with Singtel TV GO.

Guiding your way to great entertainment.

An all-in-one Singtel TV Starter guide

Welcome to your new Singtel TV.

You are about to discover the latest and the most exciting TV entertainment. Find out everything you need to get started in this guide – from recording the entire series or multiple programmes simultaneously to managing recordings on-the-go and even pausing and replaying your favourite shows.

Power on your set-top box to unlock a world of awesome TV entertainment.

Take note of these special features.



Restart TV

- Never miss a moment of your favourite shows.
- Fast forward, rewind or repeat scenes.
- Supports most channels, including the Free-to-air channels.



Catch up TV

• Access past episodes and movies anytime.



DVR multi-room viewing

- Record up to 225 hours of your favourite programmes.
- Watch in any room at home with additional set-top boxes.



Parental lock/rental lock

• Set locks on NC16 or M18 content, or on specific channels.

Did you know?

All new customers will enjoy 30 days free preview of Singtel TV channels* on their Set-Top box and Singtel TV GO.

*Selected channels

Table of Contents



Fast Forward To Your Faves

Overview Remote Control		2
Channel Guide Show Timings Showtimes (for specific channels)	Showtimes (for specific days)	3
Easy Browsing Favourites, My Channels How to Organise Your Favourites	How to View Your Subscribed Channels	4
Remote Control Subtitles, Audio, Zoom, Remote Pairing Shortcuts Functions: (), (), (), ()		5


Easy Access

Quick Access				8
Yellow Button	Blue Button Catch-Up	Recommended for You	Channel Store, 4D/ TOTO and Big Sweep, Shares, Netflix	
Singtel TV GO				10
Logging in	TV Guide C			
Recording				14
	How to Stop Recordin via DVR Set-Top Box			
Video on Deman	d (VOD)			16
How to Purchase \	/OD	How to Retrieve	Purchased VOD	
Postart TV				17
				1/
How to Restart Pro	ogramme	How to Identify	Restart Channels	
Customisation				
Parental Control				18
Parental Lock	Rental Lock	R21 Lock		
Tips				
Troubleshooting	••••••			19 - 20
Issues with TV Ser	vice	Better WiFi Conr	nectivity	
Useful Information				21
Any Queries	More Information on S	Singtel TV	Enhance your TV experience	
				(1)
				\cup

Overview

Remote Control

Know your remote control shortcuts for easy access to TV features such as Search, Record, Programme Guide and more.

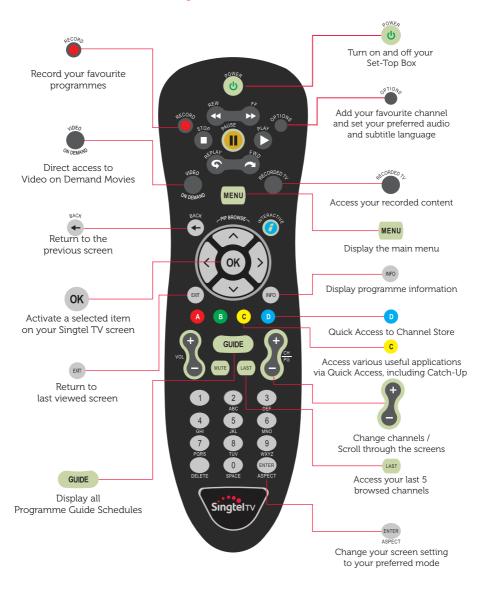

(2

Learn how to access your favourite shows.

Show Timings

Check the showtime of your favourite programmes, add shows and channels to your Favourites, and much more.

Showtimes (for specific channels)

STEP 1 Press **GUIDE** on remote control.



- **STEP 2** Press $(\mathbf{O}, \mathbf{O}, \mathbf{O}, \mathbf{O})$ on your remote control to select the specific time slot & specific channel.
- **STEP 3** Press (on remote control to view the selected channel.

Showtimes (for specific days)

- **STEP 1** Press **GUIDE** on remote control and then press the **OPTION** button.
- STEP 2 Select Jump to Day & Time and press (...)
- **STEP 3** Press \triangle and \bigtriangledown to select the specific day and then press \bigotimes .

Favourites

Easy Browsing

Curate the list of your most-watched channels and shows.

How to Organise Your Favourites


- **STEP 1** Press **GUIDE** on remote control and then press the **OPTION** button.
- **STEP 2** Select from the following features to organise your favourite shows and channels.
- Want to create a list of your most-watched channels instead of scrolling and navigating? To include a channel to your list of favourites, select your favourite channel and press **Add to Favourites**.
- Want to see all your favourite channels? Select Favourite Channels and press (R). Then select My Favourite and press (R) to view the list of your most-watched channels.
- To remove channels from My Favourite list, select Remove from Favourite and press (R).



Remote Control

Find out how to manage your Singtel TV Settings.

🚽 Subtitles

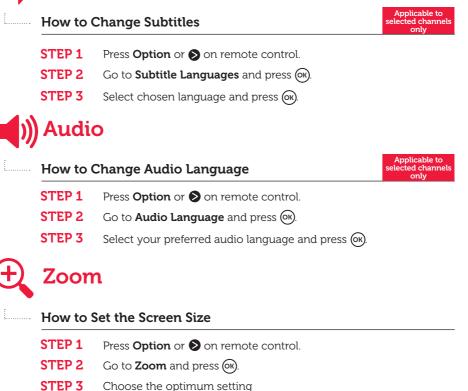



Remote Pairing

How to Use Singtel TV GO as a Remote Control

- **STEP 1** Go to **Singtel TV GO*** on your mobile device.
- **STEP 2** Ensure your mobile device's WiFi is connected to the same network as your Set-Top Box.

(Normal, Stretch, Zoom 1, Zoom 2, Zoom 3) and press (OK).

(5)

- **STEP 3** Select ^a and go to **Settings**.
- STEP 4 Click on Remote Pairing Setup and choose Setup Now when prompted.
- **STEP 5** Once the app prompts that the pairing is successful, your mobile device can be used as a remote control.

*Turn to Page 15 to find out how to record with Singtel TV GO

Learn how to browse with ease.

Shortcuts

Select from a list of TV features to navigate with ease

1.

- **STEP 1** Press **(**) on remote control.
- **STEP 2** Select from the following functions: Search, Channel Guide, Favourites, Catch-Up*, Recorded TV, Store, Settings.

*View Catch-Up for all your subscribed channels



2.

6

- **STEP 1** Press **>** on remote control.
- **STEP 2** Select from the following functions: Add to Favourites/Remove from Favourites, View Favourites, Change Favourites, Audio Languages, Subtitle Languages, Zoom.




Learn how to browse with ease.







- **STEP 1** Press **O** on remote control to browse information about current programme.
- **STEP 2** Press ♥ or ▲ to browse programme information on other channels.

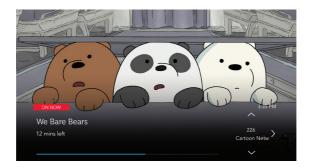

(7)

Quick Access

Discover a suite of useful features at the touch of a button

C Yellow Button


- **STEP 1** Press **C** Yellow Button on remote control.
- **STEP 2** Select from the following functions: Catch-Up, Netflix, Recommended for You, VOD, 4D/TOTO, Channel Store on the **Quick Access** bar.




Catch-Up*

(8)

Select **Catch-Up** and press (99). Select the show you would like to watch and press (99).

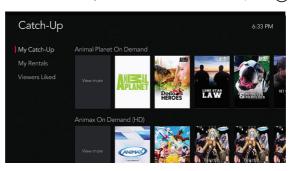



*For channels with Catch-Up viewing



Recom-	Select Recommended and press (*).
mended	A list of recommended channels will be shown.
for You	Select the specific channel and press (*) to view.
4D/TOTO	Select 4D/TOTO and press (*).
and Big	Select from 4D, TOTO and Big Sweep.
Sweep	Choose the respective draw date for the results.
Netflix	Select Netflix and press 🔍.
HOOQ	Select HOOQ and press (9).

D Blue Button - Channel Store

- **STEP 1** Press **D Blue Button** on remote control for quick access to Channel Store.
- STEP 2 Select Pack and press OK.
- **STEP 3** Press (w) to confirm your subscription.



(9)


Singtel TV GO

Catch your favourite programmes on your smart devices!

How to log in?

(10)

- **STEP 1** Launch **Singtel TV GO app** on your device.
- **STEP 2** Select $\stackrel{\triangle}{\rightarrow}$ and swipe left to settings.
- **STEP 3** Select Accounts Setup and select Accounts Details.
- **STEP 4** Enter your **NRIC number** and **Singtel TV number**, then select **SAVE**.

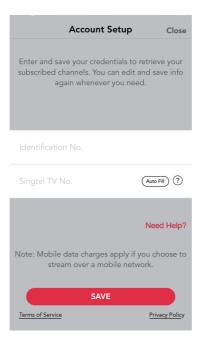

Download Singtel TV GO app now!



TV Guide

Select TV Guide

Remote Recording in Singtel TV GO

Please ensure that you are using DVR Set-Top Box, and Remote TV Recording has been set up.

- **STEP 1** Select the particular show you would like to record.
- STEP 2 Select RECORD.
- **STEP 3** Select **RECORD PROGRAMME** or **RECORD SERIES**.



Programme Reminder

- **STEP 1** Select the particular show you would like to set reminder for.
- **STEP 2** Select **REMIND ME**.
- **STEP 3** Select **15 minutes before** or **30 minutes before**.

<				8 8
	15	Mins Bef	ore	
Cancel				Done
				_
ථ	e		6	6.6
What's Mon	Sports		Catch-Up	Watch TV

*Remote Recording and Programme Reminder are complimentary features for Singtel TV subscribers.

(11)



- **STEP 2** Select show.
- **STEP 3** Select episode and select **(**).



Did you know?

(12)

You can access the **Sports Portal** feature on **Singtel TV GO** for **FREE!** Look out for football games fixtures, videos, news, player rankings, team information and table of scores! Never miss a match again when you set reminders for upcoming matches!



- **STEP 1** Select Watch TV.
- **STEP 3** Select channel you would like to watch.



Did you know?

With a Singtel TV GO subscription, you can enjoy your favourite shows on the go and on up to 4 mobile devices at home!

(13)

Recording

Record your favourite shows via your DVR Set-Top Box or remotely with Singtel TV GO.

1. How to Record via DVR Set-Top Box

STEP 1	Press the Guide button.
STEP 2	Select the particular show which you would like to record.
STEP 3	Press 🔘 Record on remote control.
STEP 4	A Recording Message prompt is shown.
STEP 5	To schedule recording for the entire series, press 🔘 Record again.
STEP 6	Press Record once more to cancel recording.
	-

2. How to Stop Recording via DVR Set-Top Box

STEP 1	Select Recorded TV.
STEP 2	Select the show you would like to stop recording.
STEP 3	Select Stop Recording.
STEP 4	Choose to Play, Keep until or Erase after recording has stopped.

3. How to Go to Recorded TV

STEP 1	Press Recorded TV on remote control or press () on remote control
	and go to Recorded TV and press 🕅

STEP 2 Select **By Date** or **By Title** and select the recorded show.

Play	Select Play and press (iv) to play the show. Select Keep Until and press (iv). Select Space needed or I erase . Select Don't change to exit without changes.		
Keep Until			
Erase	Select Erase , select Confirm and press 🛞 to erase. Select Cancel and press 🛞 to keep the show.		

4. Remote Recording via DVR Set-Top Box

To Set Up Remote Recording in TV


- **STEP 1** Press **Menu** in remote control.
- **STEP 2** Go to **Settings** and press **(**).
- STEP 3 Go to Remote Recording and press (A).
- **STEP 4** Go to **User Name** and press (...).
- STEP 5 Choose your User Name (please use 8 characters).
- **STEP 6** Create **PIN** (6-8 Digits) and confirm your **PIN** by selecting **Confirm** and press ⁽⁶⁾.

To Set Up Remote Recording in Singtel TV GO

- **STEP 1** Download the **Singtel TV GO** app on your device.
- **STEP 2** Go to Settings.
- **STEP 3** Go to Account Setup.
- **STEP 4** Go to **Remote TV Recording**.
- **STEP 5** Fill in **User Name** and **PIN** (as per set-up in TV).


Remote Recording in Singtel TV GO

- **STEP 1** Once set up, you can log into **Singtel TV GO**.
- **STEP 2** Select the programme to be recorded.
- **STEP 3** DVR Set-Top Box must be powered on or in standby mode.



Video on Demand Complete access to Singapore's largest VOD library.

1. How to Purchase VOD

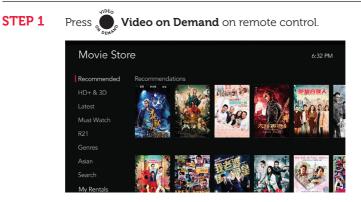

- **STEP 2** Move (\diamond) , (\diamond) , (\diamond) , (\diamond) to choose the video to be purchased and press (\otimes) to select.
- **STEP 3** Select **Rent** to purchase the video.
- **STEP 4** Press **Rent Now** to complete the purchase.

2. How to Retrieve Purchased VOD

- **STEP 1** Press Video on Demand on remote control.
- **STEP 2** Go to My Rentals.
- **STEP 4** Select **Resume** to continue the VOD viewing.
- **STEP 5** Or select **Restart** to restart the VOD.



1. How to Restart Programme

Applicable to selected channels only

- **STEP 1** On a Live Channel, press **V**.
- **STEP 2** Press **(b)** to restart the programme.



2. How to Identify Restart Channels

- **STEP 1** Press **GUIDE** on the remote control.
- **STEP 2** Supported channels will have **>** beside it.

Channel Guide				:24 PM	
MON 5/2	1:00 PM	1:30 PM	2:00 PM	2:30 PM	\sim
ອ 502 Jia Le Channel (◀ 猫 牡丹花开 /		甘味人生 / Ta		•
ວ 507 STAR Chinese 🤇	型男大主廚 / Styl	ish Man the Chef	旅行應援團/		
3 510 cHK (HD)	醜女大翻身 / 200	Pounds Beauty			
ວ 512 now Jelli (HD)	緣來不晚 / Love I	Never Comes Late		一起輕旅行	
ອ 513 ONE HD (Mand	◀ —滴 K-撒 英	F女儿荷娜 / GOOD	DAUGH 好女	c儿荷娜/GOOD	DA 🕨
⊙ 516 Xing Kong	阿U/AU	星空直播间 / Xin	投资艺术 / To	ouZ 拜托了妈如	5 / N 🕨
	牡丹花开 / F 1:102:00 PM ・ "Ep 95"	Peony In Bloom 36 mins Left	1		~

Fast forward, rewind or repeat scenes in **Restart** mode using **REW / FF / PAUSE / REPLAY / FWD**

(17)



Parental Control

How to Set Parental Control

- **STEP 1** Press (Menu) or \bigcirc on remote control.
- **STEP 2** Go to Settings.

1. Parental Lock

Protects your children from consuming undesirable content. Set locks on NC16 or M18 content (based on MDA ratings), or on specific channels.

STEP 1	Under Parental Control, select 😭 Parental Lock.
STEP 2	Enter your default 4-digit PIN "1234".
STEP 3	Go to Change PIN .
STEP 4	Enter your new 4-Digit PIN " (****) ".
STEP 5	Enter your 4-Digit PIN " $(\times \times \times)$ " to confirm the changes.
STEP 6	If you forget your PIN, call 1688 for more information.

2. Rental Lock

Prevents unintended purchases by locking VOD and Channel Store.

- STEP 1 Under Parental Control, select Rental Lock.
- STEP 2 Set PIN.
- **STEP 3** Enter your default 4-digit PIN "1234".
- **STEP 4** Go to Change PIN.
- **STEP 5** Enter your new 4-Digit PIN " ********]".
- **STEP 6** Enter your 4-Digit PIN " $\times \times \times$ " to confirm the changes.
- **STEP 7** If you forget your PIN, call 1688 for more information.

3. R21 Lock

(18)

Locks R21 content by default to prevent children under 21 years old from watching it.

STEP 1 Under **Parental Control**, select **R21 Lock**.

STEP 2 As it is locked by default, call 1688 to acquire password so that you can unlock R21 content.

Troubleshooting

Pick up quick tips on troubleshooting issues with your TV service and maximising your home entertainment.

Issues with TV Service

If you encounter an error message on your TV screen, follow the tips below to reboot your TV equipment.

STEP 1 Power off your devices in the following sequence

Set-Top Box. Optical Network Router (ONR).

STEP 2 Power on Optical Network Router (ONR)

Ensure POWER and PON LED indicators are lighted.



STEP 3 Power on Set-Top Box



• Avoid overheating by placing your devices in an open area.

- Keep your Set-Top Box on standby mode when it's not in use.
- Ensure all connecting ends of cables are intact and tightly plugged into the power outlets.

Call 1688 if you require more information.

(19)

Better WiFi Connectivity

Optimise WiFi connectivity at home with these useful tips below.

Tip 1 Reposition your router

- Place your router in a central location, away from clutter and glass/metallic objects.
- Avoid placing the router on the floor.
- To extend your WiFi coverage further, you can also add on a WiFi Mesh Dual Pack.



Tip 2 Reboot your router to reduce WiFi congestion

- **STEP 1** Connect to your router wirelessly or via ethernet.
- **STEP 2** On your device web browser, type **192.168.1.254** to go to the router's Setting page.
- **STEP 3** Click on **General/Wireless**, under **Channel** drop down box, select **Automatic** for **2.4GHz** & **5GHz Wireless** and click **Apply**.
- **STEP 4** Reboot your router by turning it off and on.
- **STEP 5** Now your router can automatically scan and connect to the least congested WiFi channel.

Tip 3 Consider wireless dual-band routers

- Different devices support different WiFi frequencies.
- When many neighbouring WiFi network or wireless devices run on the same 2.4GHz frequency, congestion may happen.
- A dual-band router can help ease congestion as it supports 2 frequency bands (2.4GHz & 5.0GHz).

For more tips on maximising your WiFi connectivity, visit singtel.com/wifimaster



(20)

Need WiFi Mesh for your home? Call **1609** to find out more!

Any Queries?



Call 1688

Speak to our friendly customer service officers regarding billing enquires, troubleshooting, technical assistance and other general enquiries.

Need More Information on Singtel TV?



Visit singteltv.com.sg

Get comprehensive information on Singtel TV including the monthly showtime guide, highlights, terms and conditions, events and promotions.

Want to Enhance Your TV Experience?

Subscribe to our other exciting TV content packs, recontract or purchase TV value-added services.

Visit Singtelshop.com/singteltv



Call 1609



Or drop by any of these Singtel Shops!

Central

BUGIS JUNCTION #01-50/50A COMCENTRE #01-00 Comcentre 2

North

ANG MO KIO HUB #B1-54/55/56/57 CAUSEWAY POINT #03-03/04/05 WATERWAY POINT #B1-30

West

JURONG POINT #B1-98/99

East

PARKWAY PARADE #B1-01/02 TAMPINES MALL #02-13/14/15

Visit **Singtel.com/storelocator** for the complete list of Singtel Shops and Singtel Exclusive Retailers.

